


RTC Error Message at Start Up

09/02/14


When starting software if it seems “stuck” you will see a RT Controller area and instructing you to push the reset button.

The RT Controller box is the black box below the X-Cite bulb. Open the door to get to the reset button

RT Controller Box

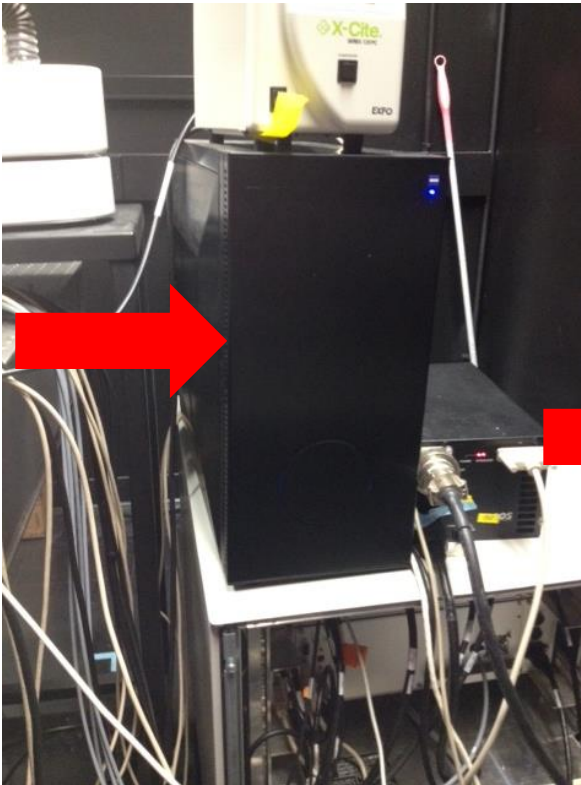

RT Controller Box with door open

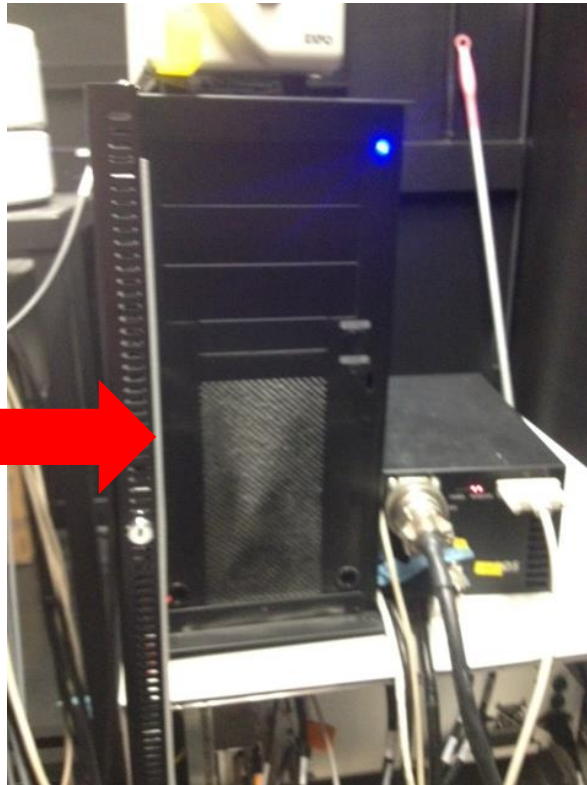

RTC Rest Button

